User Manual
AFRA VANGUARD SAFE
AF-PS2902F


QUICK ACCESS PISTOL SAFE OWNER'S MANUAL

Please do not keep emergency keys in your safe!


Dear valued customer:

Thank you for choosing our products! You've taken an important step in organizing and protecting your most valuable possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, thank you for choosing our products!

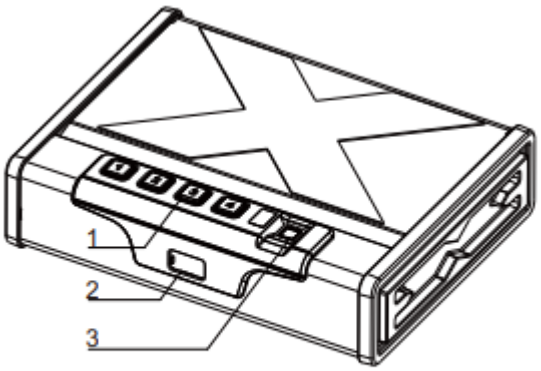

1. Keypad
2. Keyhole cover
3. Fingerprint scanner

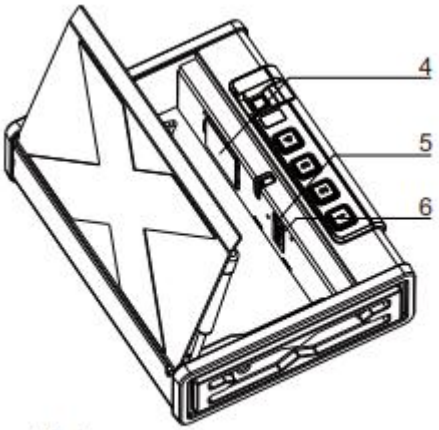

4.Battery cover
5.Set button
6.LED light

OPENING YOUR SAFE FOR FIRST TIME

- Insert key into keyhole and turn it clockwise to open it.

NOTE: Do not lock key inside safe - this is an emergency key and will open the safe in the event that you have lost your code.

INSERTING THE BATTERIES

- Remove the battery pack cover.
- Insert four AA alkaline batteries.

NOTE: Do not use rechargeable batteries or any other type of non-alkaline battery.
Do not mix old and new batteries.
Do not mix alkaline and standard batteries.

FACTORY PRESET CODE

- Factory code: 123 4. Press any button once to bring the safe out of standby mode, then enter the Factory Code 1 2,3,4. The Blue LED will light.

IMPORTANT: All safe models initially work with the safe code 1, 2,3, 4. It is therefore important to reset your safe with a new user code you have personally selected to provide maximum security.

TO SET AN USER CODE

- Press the set button until you hear the beeps and the keypad flashes, you can start to set you own user code with 4-6 digits long then press the set button again to confirm the user code, when you hear a beep, it means the new code has been set successfully.

TO SET PRIMARY USER FINGERPRINTS

- Press the set button until you hear the beeps and the keypad flashes,put one finger across fingerprint scanner. Repeat three times. When you hear a beep,it means the Primary User Fingerprints has been set successfully.

NOTE: Total 20 pieces fingerprints can be set, the setting method is same as the Primary User Fingerprints.



I: Correct



II: Incorrect

RESTORE FACTORY SETTINGS

- Keep pressing the set button until hear a beep, the reset is the successful.

ALARM FUNCTION FOR ERROR INPUTTING

- Enter the wrong password or fingerprint 5 times,the system is locked 100 seconds.

MUTE FUNCTION

- Press the “1” keypad for 3 seconds until the light flash,it means the mute function is on.
- Press the "1" keypad for 3 seconds until hear a beep and the light flash, it means the mute function is off.

BATTERY REPLACEMENT REMINDER

- When the power supply voltage is lower than 4.8V. The yellow light will flash 6 times after opening the door and you will hear 6 beeps continuously. It means low battery, please replace the battery in time.

MOUNTING METHOD

TIP: Make sure you have enough clearance for the lid to open properly before mounting the safe and fix the safe in the place which is not easy to move.

- Drill holes in the right place.
- Use the tapping screws (or expansion bolts) to secure the case to the wall. Make sure the case is mounted in place as required and then tighten all screws.

CAUTION:

- Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.
- DO NOT let the safe door face the floor when you mounting the safe with the vertical direction to avoid your property from damage.